

Mode Switching

| Key 1 | Key 2 | | | |
|-------|-------|-------------|----------------------------|------------------------------|
| Fn | Q | Short Press | Switch to Bluetooth 1 Host | Q LED flashes blue |
| Fn | Q | Long Press | Bluetooth 1 Pairing mode | Q LED flashes Blue rapidly |
| Fn | W | Short Press | Switch to Bluetooth 2 host | W LED flashes pink |
| Fn | Q | Long Press | Bluetooth 2 Pairing mode | W LED flashes Pink rapidly |
| Fn | E | Short Press | Switch to Bluetooth 3 host | E LED flashes yellow |
| Fn | E | Long Press | Bluetooth 3 Pairing mode | E LED flashes Yellow rapidly |
| Fn | R | Short Press | Switch to 2.4G host | R LED Flashes Green |
| Fn | R | Long Press | 2.4G pairing mode | R LED Flashes Green rapidly |
| Fn | T | Short Press | Wired Mode | |
| Fn | A | Short Press | Windows Layout | |
| Fn | S | Short Press | Mac Layout | |

Lighting Control

| | | | | |
|----|------------------|-------------|--------------------------------|--|
| Fn | \ | Short Press | Toggle between Lighting modes | Switch between solid/ Off and various patterns |
| Fn | Up Arrow | Short Press | Increase backlight brightness | |
| Fn | Down Arrow | Short Press | Decrease backlight brightness | |
| Fn | Right/Left Arrow | Short Press | Change backlight pattern speed | |
| Fn | Esc | Short Press | Restore steady backlight | |

Function Keys (Windows)

| | | | | |
|----|-----------|-------------|--|---------------------------|
| Fn | 1 | Short Press | F1 | |
| Fn | 2-10 | Short Press | F2-F10 | |
| Fn | - | Short Press | F11 | |
| Fn | + | Short Press | F12 | |
| Fn | Left Ctrl | Short Press | Toggle between Function Lock and Number mode | Ctrl key flashes white X3 |
| Fn | F1 | Short Press | Screen brightness : Reduce | |
| Fn | F2 | | Screen brightness : Increase | |
| Fn | F3 | | Calculator | |
| Fn | F4 | | Check PC BIOS | |
| Fn | F5 | | Check PC BIOS | |
| Fn | F6 | | Media Last track | |
| Fn | F7 | | Media Next Track | |
| Fn | F8 | | Media Play/ Pause | |
| Fn | F9 | | Media Stop | |
| Fn | F10 | | Mute | |
| Fn | F11 | | Vol - | |
| Fn | F12 | | Vol + | |
| Fn | Win | | Lock Windows Key/ Unlock Windows key | |

Function Keys (Mac OS)

| | | | | |
|----|-----------|-------------|--|--|
| Fn | 1 | Short Press | F1 | |
| Fn | 2-10 | Short Press | F2-F10 | |
| Fn | - | Short Press | F11 | |
| Fn | + | Short Press | F12 | |
| Fn | Left Ctrl | Short Press | Toggle between Function Lock and Number mode | |
| Fn | F1 | Short Press | Screen brightness : Reduce | |
| Fn | F2 | | Screen brightness : Increase | |
| Fn | F3 | | Mission Control | |
| Fn | F4 | | Dictation | |
| Fn | F5 | | Display all windows of current App | |
| Fn | F6 | | Spotlight | |
| Fn | F7 | | Media Next Track | |
| Fn | F8 | | Media Play/ Pause | |
| Fn | F9 | | Media Stop | |
| Fn | F10 | | Mute | |
| Fn | F11 | | Vol - | |
| Fn | F12 | | Vol + | |